# AINA Vehicle Cradle QUICK GUIDE

**AINA Wireless** 

DOC ID: IU0007 ver. 2.0.

# **INCLUDED IN THE PACKAGE**



X 1




X 1



X 4

# **DESIGN**

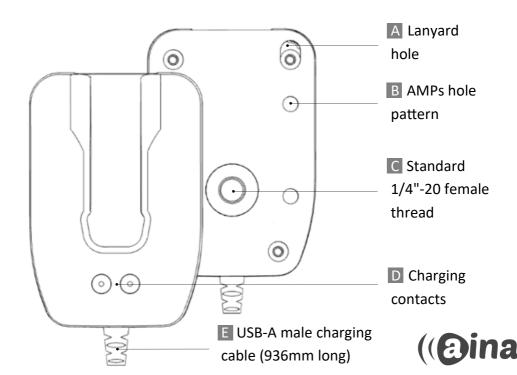


#### **COMPATIBLE MOUNTS AND PLATES**

- Any camera mount with standard 1/4"-20 UNC male with screw 6mm threads
- Any mount or plate with standard AMPs hole pattern: 30x38mm with four M4 screws
- Compatible with all major mount manufacturers, such as Arkon Mounts (www.arkon.com), RAM Mount (www.rammount.com) and GPS lockbox (www.gpslockbox.com)

#### **CHARGING INSTRUCTIONS**

- 1. Slide the PTT Voice Responder clip into the Vehicle Cradle
- 2. Connect the charging cable's USB-A male end into: a vehicle power adapter, a car charger or a USB-A female socket

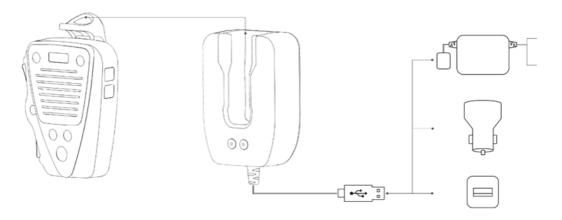

**NOTE** use only USB certified power supply, rated current 700mA - 2.8A and voltage 4.75—5.25V. Charging temperature range 10°- 40°C

**NOTE 2** do NOT cut the cable, always connect to USB power supply

# **LANYARD (OPTIONAL)**

- Optional where driving regulations require a tethered communication device
- Guide the key-chain ring on the lanyard through the lanyard hole on the back of the cradle
- Use the carabiner to hook into the Voice Responder's top loophole

### **CUSTOMER CARE**

If any part of the equipment is damaged on arrival, contact the shipper to conduct an inspection and prepare a damage report. Save the shipping container and all packing materials until the inspection and the damage report are completed.

In addition, contact the Customer Care to make arrangements for replacement equipment. Do not return any part of the shipment until you receive detailed instructions from an AINA Wireless representative.

Contact Customer Care at:

E-mail: sales@aina-wireless.com

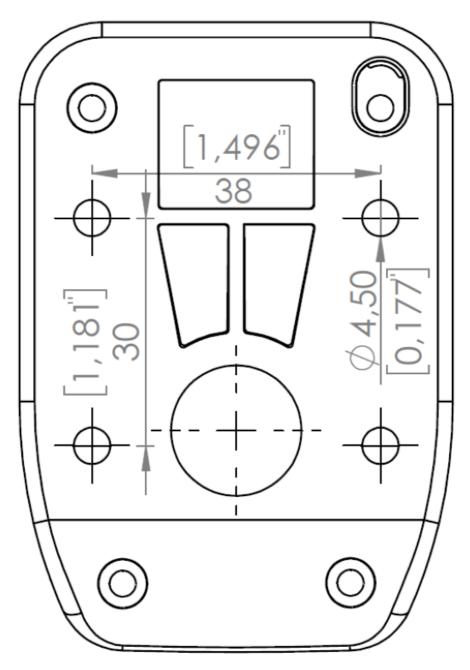


Image in 1:1 size. Can be used as an drilling template.

