

# Quick Start Guide

## About your phone



NOTE: Devices and software are constantly evolving. The screen images and icons you see here are for reference only.

## What is in the box?

- Phone (includes non-removable Li-Ion battery)
- Certified Quick Charge 2.0 AC charger (Type-C USB data cable pluggable)
- Type-C USB data cable
- Quick start guide

## Features

- IP68 dust proof and waterproof (up to 6.5 ft deep, up to 30 min), and MIL-STD 810G durability
- 13MP rear, 5MP front, and wide view 4K action cameras, all function underwater
- Loud 106dB+ dual front speakers and 4 microphone noise-cancellation to hear and be heard clearly
- Fingerprint security sensor in the Power key for quick 1-handed unlocking
- Large 3240mAh battery, Qi wireless charging, and USB Type-C fast charging
- Dedicated PTT and Camera keys are also user-programmable to access other functions
- 2-year standard manufacturer's warranty

## Contact information

- Find out more about Kyocera - [www.kyoceramobile.com](http://www.kyoceramobile.com)
- Phone support and Registration - [www.kyoceramobile.com/support/phone/](http://www.kyoceramobile.com/support/phone/)
- Learn about our white glove service for businesses - <https://www.kyoceramobile.com/business/business-select/>
- Find accessories - [www.kyoceramobile.com/accessories/](http://www.kyoceramobile.com/accessories/)

NOTE: For user guide and safety & warranty information about your phone, tap > **Settings** > **System** > **About phone** > **Help** > **United States / Canada** > **User guide** or **Safety & Warranty** on your phone or visit: [KyoceraMobile.com/Support/Phone](http://KyoceraMobile.com/Support/Phone) and select your phone.

© 2020 Kyocera Corporation. All rights reserved. KYOCERA is a registered trademark of Kyocera Corporation. All other trademarks are the property of their respective owners.



**DURA FORCE PRO 2**


by **KYOCERA**

## Setting up your phone

### Install a SIM/microSD card


#### Step 1. Open the SIM/microSD card slot cover

With the phone facing down, open the card slot cover.

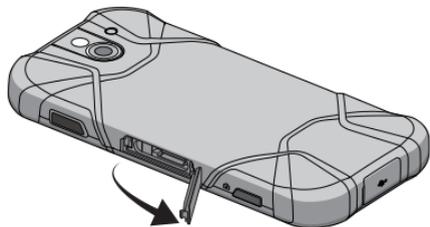

#### Step 2. Pull out the SIM/microSD card tray


Hook your fingernail on the rib on the tray's top edge and pull it out.

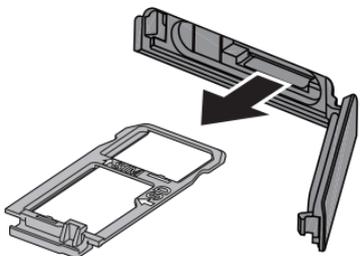

NOTE: microSD cards are sold separately.


#### Step 3. Place a SIM and microSD card

Put the tray onto a flat surface and place a SIM and microSD card into the tray with the gold contacts facing down as shown.

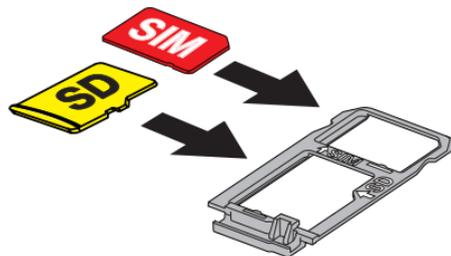


#### Step 4. Insert the SIM/microSD card tray

Insert the tray into the phone, being careful not to let the cards slide out. Then gently push the tray in until it clicks.

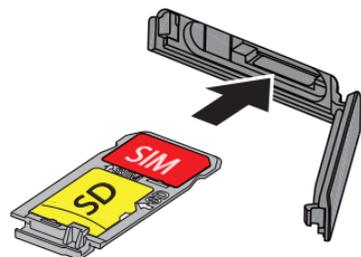

#### Step 5. Close the SIM/microSD card slot cover

After the tray is all the way back in your phone, securely close the card slot cover.

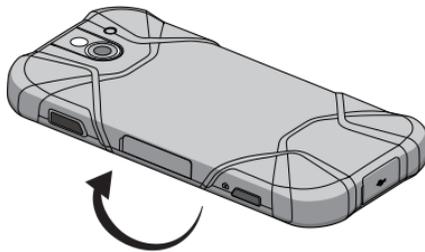

NOTE: Make sure the SIM/microSD card slot cover is securely closed to maintain your phone's waterproof seal.

WARNING: Do not use the phone under water with a broken or open SIM/microSD slot cover, USB/Charger port cover or headset jack cover.

#### Step 6. Charge your phone

Before turning on your phone, charge it fully.

Open the USB/Charger port cover and insert the small end of the USB cable into the phone. Insert the larger end into the charger and plug it into an outlet.



When charging is complete, remove the cable from the port and securely close the cover.

WARNING: Use only approved chargers and cables with your phone. Improper handling of the charging port, as well as the use of an incompatible charger or cable, may cause damage to your device and void the warranty.

NOTE: Make sure the USB/Charger port cover is securely closed, when the port is not in use, to maintain your phone's waterproof seal.

## Using your phone

### Turning your phone on/off


To turn your phone on, press and hold the **Power** key.

Press and hold the **Power** key again to turn it off.

### Locking/unlocking the screen

To turn on your screen, press the **Power** key. Then:


- > Swipe up to open the Home screen.
- > Swipe left to open the Camera app.
- > Swipe right to launch Google Assistant.

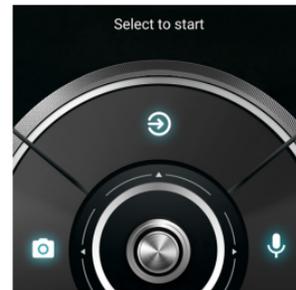

To turn off your screen and prevent accidental key presses, press the **Power** key.

### Make a Call

 - From the Home screen, tap > **DIALPAD**.
- Enter the phone number and tap to place the call.
- To end the call, tap .



1	2 ABC	3 DEF
4 GHI	5 JKL	6 MNO
7 PQRS	8 TUV	9 WXYZ
* 0 +	#	

