

User Manual

AdvanceCommunicator

For Kyocera devices:
E4810 DuraXV Exteme
E4811 DuraXV Extreme+
E4830 DuraXE Epic
E4831 DuraXA Equip



www.advancetec.com



Mobile phone
not included

AdvanceCommunicator consists of:

1. Part #AT3041A

Desktop

3. Part #AT9972B

Power adapter

2. Part # AT3051-02A

Privacy Handset



Index

Page	Details
3	Setting Up The AdvanceCommunicator
4	Inserting the mobile phone into the AdvanceCommunicator™
5	Removing the mobile phone from the AdvanceCommunicator™
6	Making and Receiving calls in Hands Free Mode.
7	Making and Receiving calls via the mobile phone.
8	Use of the AdvanceCommunicator™ with Dispatch calls
8	Volume Control
8	Recording Feature
9	Summary of LED Indicators
9	Charging The Battery

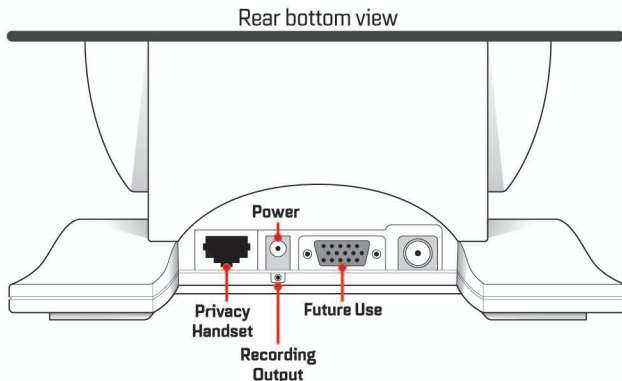


Diagram 1

■ SETTING UP THE ADVANCECOMMUNICATOR™

1. Place the **AdvanceCommunicator™** in a convenient position within easy reach of an AC power outlet.
2. Attach the plug at the end of the coil cord of the **Privacy Handset** into the corresponding **RJ45** receptacle on the back of the **AdvanceCommunicator™**.
3. Plug the power supply into the wall AC power outlet and the round barrel plug at the end of the cord of the power supply into the corresponding power receptacle on the back of the **AdvanceCommunicator™**
4. At this point the **LED will flash RED**



■ INSERTING THE MOBILE PHONE INTO THE ADVANCECOMMUNICATOR™



1. Insert the top of the mobile phone behind the **ridge on the cradle**



2. Press the bottom of the mobile phone back into the Cradle until it snaps into place.



3. Insert the round audio plug from the Advance Communicator into the side of the audio connector on the mobile phone and turn the mobile phone on.



■ REMOVING THE MOBILE PHONE INTO THE ADVANCECOMMUNICATOR™



1. Remove the audio plug from the side of the audio connector on the mobile phone.



2. Press the release button on the bottom of the Advance Communicator, the mobile phone will release and move forward.



3. Slide the mobile phone down and out of the cradle.



Diagram 2





■ USE OF THE ADVANCECOMMUNICATOR™

1. To make a dispatch call **press and hold down the PTT/Space Bar** and speak towards the Microphone. **Release PTT/Space Bar** when you stop speaking.
2. To make a dispatch call with handset, **pick up the handset and press and hold the round PTT button on the handset** and speak towards the handset.
3. To listen to the other party in a dispatch call, don't press anything. You will hear the call through the speaker or handset.

■ VOLUME CONTROL

The volume of the **AdvanceCommunicator™** can be increased or decreased with the volume buttons on the side of the mobile phone.

■ RECORDING FEATURE

1. The **AdvanceCommunicator™** will allow the recording of audio traffic with an external recording device via a 3.5mm plug on the back of the **AdvanceCommunicator™**.
2. Dispatch calls will be recorded both audio in and audio out.



■ SUMMARY OF LED INDICATORS

Flashing RED:

Mobile phone not inserted

Steady GREEN:

Mobile phone inserted into the AdvanceCommunicator

CHARGING THE BATTERY

With the mobile phone turned off, the **AdvanceCommunicator™** will charge the battery of the mobile phone.



OPTIONAL ACCESSORIES

*not included, available for purchase.

PART # AT8428A – PALM MIC

1. To use a Palm Mic. with the AdvanceCommunicator™ unplug the privacy mobile phone supplied with the unit (and remove it from its cradle) and plug the RJ45 connector of the Palm Mic into the corresponding RJ45 receptacle on back of the AdvanceCommunicator™
2. Once connected, the pressing of the switch on the Palm Mic. will activate the Palm Mic.



PART # AT8421A – HEADSET

1. To use the Headset with the AdvanceCommunicator™ unplug the privacy mobile phone supplied with the unit (and remove it from its cradle) and plug the RJ45 connector into the corresponding RJ45 receptacle on back of the AdvanceCommunicator™
2. Once connected, audio will be transferred to the Headset.
3. PTT calls can be made with the PTT/Space Bar or the PTT button on the cable on the Headset.





PART # AT8400A – FOOT PEDAL

1. To use the Foot Pedal with the AdvanceCommunicator™ unplug the privacy mobile phone supplied with the unit (and remove it from its cradle)
2. Plug the RJ45 connector of the Y Adapter Cable (**Part # AT8405A supplied**) into the corresponding RJ45 receptacle on back of the AdvanceCommunicator™
3. Plug the RJ45 connector of the Foot pedal into one of the corresponding RJ45 receptacle of the Y Adapter **Cable AT8405A**.
4. To use both the Headset and Foot Pedal with the Advance Communicator™ simultaneously, use the Y connector adapter **Part # 8405A** supplied with the Foot Pedal..
5. Unplug the privacy mobile phone supplied with the unit (and remove it from its cradle) and plug the RJ45 connector of the Y Adapter Cable into the corresponding RJ45 receptacle on back of the AdvanceCommunicator™
6. Plug the Headset and Foot Pedal into the corresponding RJ45 receptacles of the Y Adapter Connector.



NOTE: If neither the headset nor Foot Pedal work, swap around the plugs into the Y Adapter Connector.

7. Once connected, the Headset and Foot Pedal will function as set out above.



RJ45 connector



1150 NW 163rd Drive, Miami, FL 33169
T: 305-623-3939 F: 305-623-3996

www.advancetec.com

